

Callaway
✓

Callaway
✓



© 2016 CALLAWAY GOLF COMPANY. Callaway Golf and the Chevron device are trademarks of Callaway Golf Company. IZZO Golf is an official licensee of Callaway Golf Company.

300 PRO LASER RANGEFINDER



INTRODUCTION

Thank You for choosing the **Callaway 300 Pro Laser Rangefinder** featuring **P.A.T. (Pin Acquisition Technology)**, **Slope Mode**, and **Birdie Technology**. Designed to deliver all of the precise distance measurements crucial to golfers.

SPECIFICATIONS

Product	Callaway 300 Pro Laser Rangefinder
Model	300 Pro
Dimensions	4.25" x 3" x 1.75"
Weight	7.58 oz.
Battery	CR2 3 -Volt Lithium Battery
Display	LCD display
Magnification	6X
Max Range	5-1000 yd
Range To Flag	5-300 yd
Accuracy	+/- 1 yd
Unit of Measure	Yards/Meters
Water/Fog Proof	Yes IPX4 Designation

INCLUDES


- A. CR2 - 3-Volt Lithium Battery
- B. Carry Case
- C. Cleaning Cloth
- D. Lance Strap



BATTERY INSTALLATION

The Callaway 300 Pro uses a replaceable CR2 3-volt lithium battery. To install, remove the battery cap located below the **Eye Piece**. Insert battery negative end first (flat end) and close battery cap.

1. Lift hatch tab.
2. Turn counterclockwise to open.
3. Insert battery into chamber (negative end first).
4. Replace battery cap and tighten by turning clockwise.

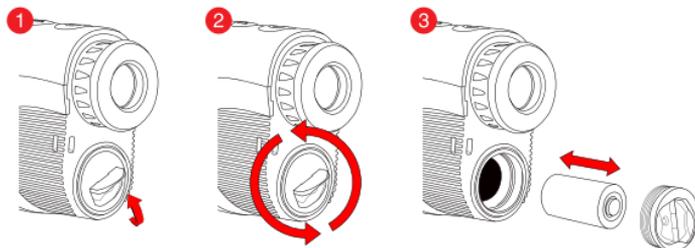


NOTE: If the **Low Battery Icon** is present on LCD display, there are approximately 200 ranges left until the battery is completely drained. The **Low Battery Icon** will flash if the battery life is very low. In this case, the battery needs to be replaced before next use.

RANGEFINDER DIAGRAM

- A. Eye Piece
- B. Diopter Adjustment
- C. Power Button
- D. Mode Button
- E. Battery Door




LCD DISPLAY

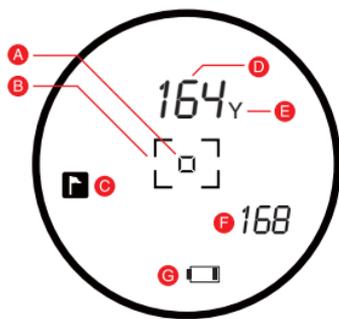


- A.  Zero-In Aiming Square
- B.  Laser Indicator Box
- C.  P.A.T. Mode Indicator
- D. 164_Y Distance
- E. Y/M Unit of Measure
- F. 168 Slope Adjusted Distance
- G.  Low Battery


HOW TO USE

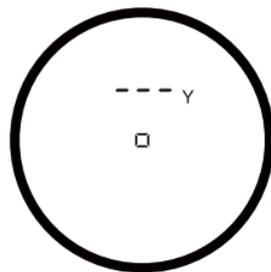

1. While looking through the **Eye Piece**, **PRESS** and **RELEASE** the **Power Button**. The rangefinder is now powered on.

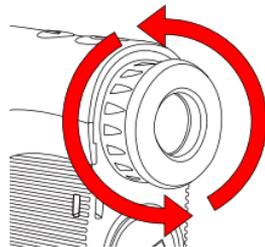


2. To focus/increase clarity, use the **Diopter Adjustment** by turning the **Eye Piece**.

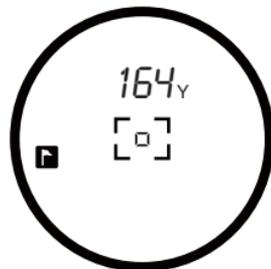

3. Continue looking through the **Eye Piece**, aim the **Zero-In Aiming Square** at your intended target and **PRESS** the **Power Button**. The laser will fire and the **Laser Indicator Box** will appear around the **Zero-In Aiming Square**. The measurement will be displayed at the top of the LCD display.


MEASUREMENT MODES

- 1. Standard** - Standard Mode is recommended when measuring distances to larger objects. (Fig. A)
- 2. P.A.T. (Pin Acquisition Technology)** - P.A.T. Mode is best used when measuring the distance to a flagstick or smaller objects. To toggle between Standard and P.A.T. Mode, **PRESS** and **RELEASE** the **Mode Button (M)**. When P.A.T. Mode is activated, the flagstick icon will appear on the left side of the LCD display. (Fig. B)

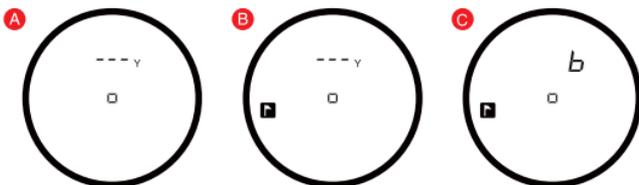

- 3. Birdie Technology** - Device will “chirp” when locked onto the pin. To toggle on/off **PRESS** the **Mode button (M)**. The “b” icon will appear when Birdie Technology is turned on. (Fig. C)

- 4. Slope Mode** - Device will measure the angle of incline/decline (Fig. B) then calculate and display the slope adjusted distance in the bottom right of the LCD display. (Fig. C) To toggle Slope Mode on/off, **HOLD** the **Mode Button (M)** down for 3 seconds.

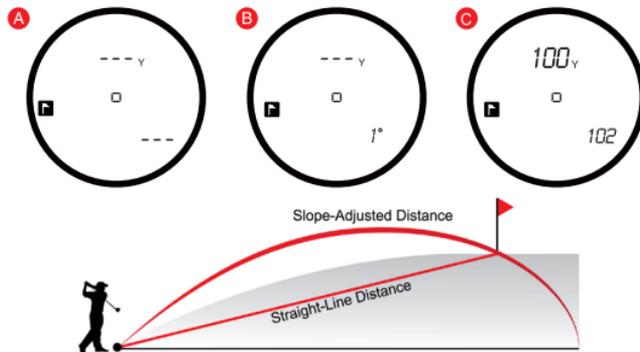

- 5. Scanning** - To measure distances to multiple targets in succession, **PRESS** and **RELEASE** **Power Button** to power on. Then **HOLD** **Power Button**, the **Laser Indicator Box** will flash and the laser will continuously fire. Measurements will change as you scan the landscape and change targets.

NOTE: While scanning in P.A.T. Mode, the measurement will only change when a shorter distance is measured. This is useful when measuring the distance to a flagstick when there are trees or other objects in the background.

- 6. Unit of Measure** - To change the unit of measure from Yards to Meters, **PRESS** **Power Button** to power on, then **HOLD** **Mode Button (M)**. The unit of measure is indicated by a “Y” or “M” shown directly to the right of the distance displayed.

OPERATIONAL NOTES

1. The maximum measurement range is 5-1000 yards to objects and 5-300 yards to a flagstick with +/- 1 yard accuracy.

NOTE: Maximum range can depend on several factors, including target characteristics and environmental conditions. For instance, longer maximum distances may be obtained to targets that are large in size, brightly colored, or have a reflective finish. Ranging capability can also be affected by the angle to the target and lighting conditions.

2. **Auto Shutoff** - To conserve battery life, the device will automatically power off when idle for more than 5 seconds.
3. **Weather Conditions** - Heavy rain and thick fog can potentially limit the maximum range of the device.
4. **Waterproof** - The device is waterproof to IPX4 designation (It is protected against rain and splashing water).

MAINTENANCE

1. To clean, use only a soft, clean cloth to prevent scratches.
2. Do not submerge in liquid or apply any cleaning products.
3. Do not store in extremely hot/cold temperatures (<50°F - >110° F).
4. Store in carrying case when not in use.

TROUBLESHOOTING

Rangefinder is consistently providing inaccurate measurements.

- Make sure the device is set to the desired unit of measure (Yards or Meters).
- Weak battery signal can affect the accuracy of the device. If the **Low Battery Indicator** is present on the LCD display, replace the battery.
- Make sure there isn't anything obstructing your view such as leaves, branches, your finger, etc.

When looking through the Eye Piece, the view is blurry.

- Use the Diopter Adjustment by turning the **Eye Piece** to focus/increase clarity.
- Make sure there isn't anything obstructing your view such as leaves, branches, your finger, etc.
- Use a soft, clean cloth to clean lens.

When should the battery be replaced?

- If the **Low Battery Indicator** is present on the LCD display.
- If the rangefinder is consistently providing inaccurate measurements.
- If the LCD display is not present when **PRESSING** the **Power Button**.

What type of battery does the rangefinder use?

- CR2 3-Volt Lithium Battery.

TROUBLESHOOTING (CONTINUED)

When should P.A.T. Mode be used?

- When measuring the distance to smaller targets such as a flagstick.
- When scanning the landscape to measure distances to a smaller target such as a flagstick and there are trees or other objects in the background.

If you have any other questions or concerns, please call 1-888-606-4634 or go to www.callawaydmd.com.

WARRANTY POLICY

This product is warranted to be free from defects for up to (1) year from the original purchase date. IZZO Golf cannot refund your purchase unless purchased directly from IZZO Golf. IZZO Golf will replace or repair any unit that is determined defective under normal use within the warranty period. Please call Customer Service at **888-606-4634** to request a Return Authorization. All defective products must be returned to:

IZZO Golf
Attn: Returns Dept.
1635 Commons Parkway
Macedon, NY 14502

Please include a note with your Name, Address, Phone # and the Return Authorization #. Your replacement will be shipped once we diagnose the returned unit.

WARNING

- **NEVER** look directly into the sun or intense light when using the laser rangefinder.
- **DO NOT** aim/point laser rangefinder at another person.
- **DO NOT** aim/point laser rangefinder at anyone's eyes or face.
- **DO NOT** attempt to disassemble the laser rangefinder.
- **DO NOT** submerge in any liquid.
- **DO NOT** store the laser rangefinder in extreme cold/hot temperatures (<50°F - >110°F).



© 2016 CALLAWAY GOLF COMPANY. Callaway Golf and the Chevron device are trademarks of Callaway Golf Company. IZZO Golf is an official licensee of Callaway Golf Company.